

- Δ : internal component.
- $\text{---}\text{||}\text{---}$: fusible resistor.
- $\text{---}\text{||}\text{---}$: adjustment for repair.
- $\text{---}\text{||}\text{---}$: stages are taken with a VOM (50 k Ω /V).
- Voltage variations may be noted due to normal production tolerances.

- Waveforms are taken with a scope.
- Voltage variations may be noted due to normal production tolerances.
- Component numbers refer to manufacturers.
- Ground path.

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

● Voltage are dc with respect to ground under no-signal (returned) condition.
● mark FM : MW < : LW

