


Mounting Diagram

MPX Decoder Section
—Conductor Side—

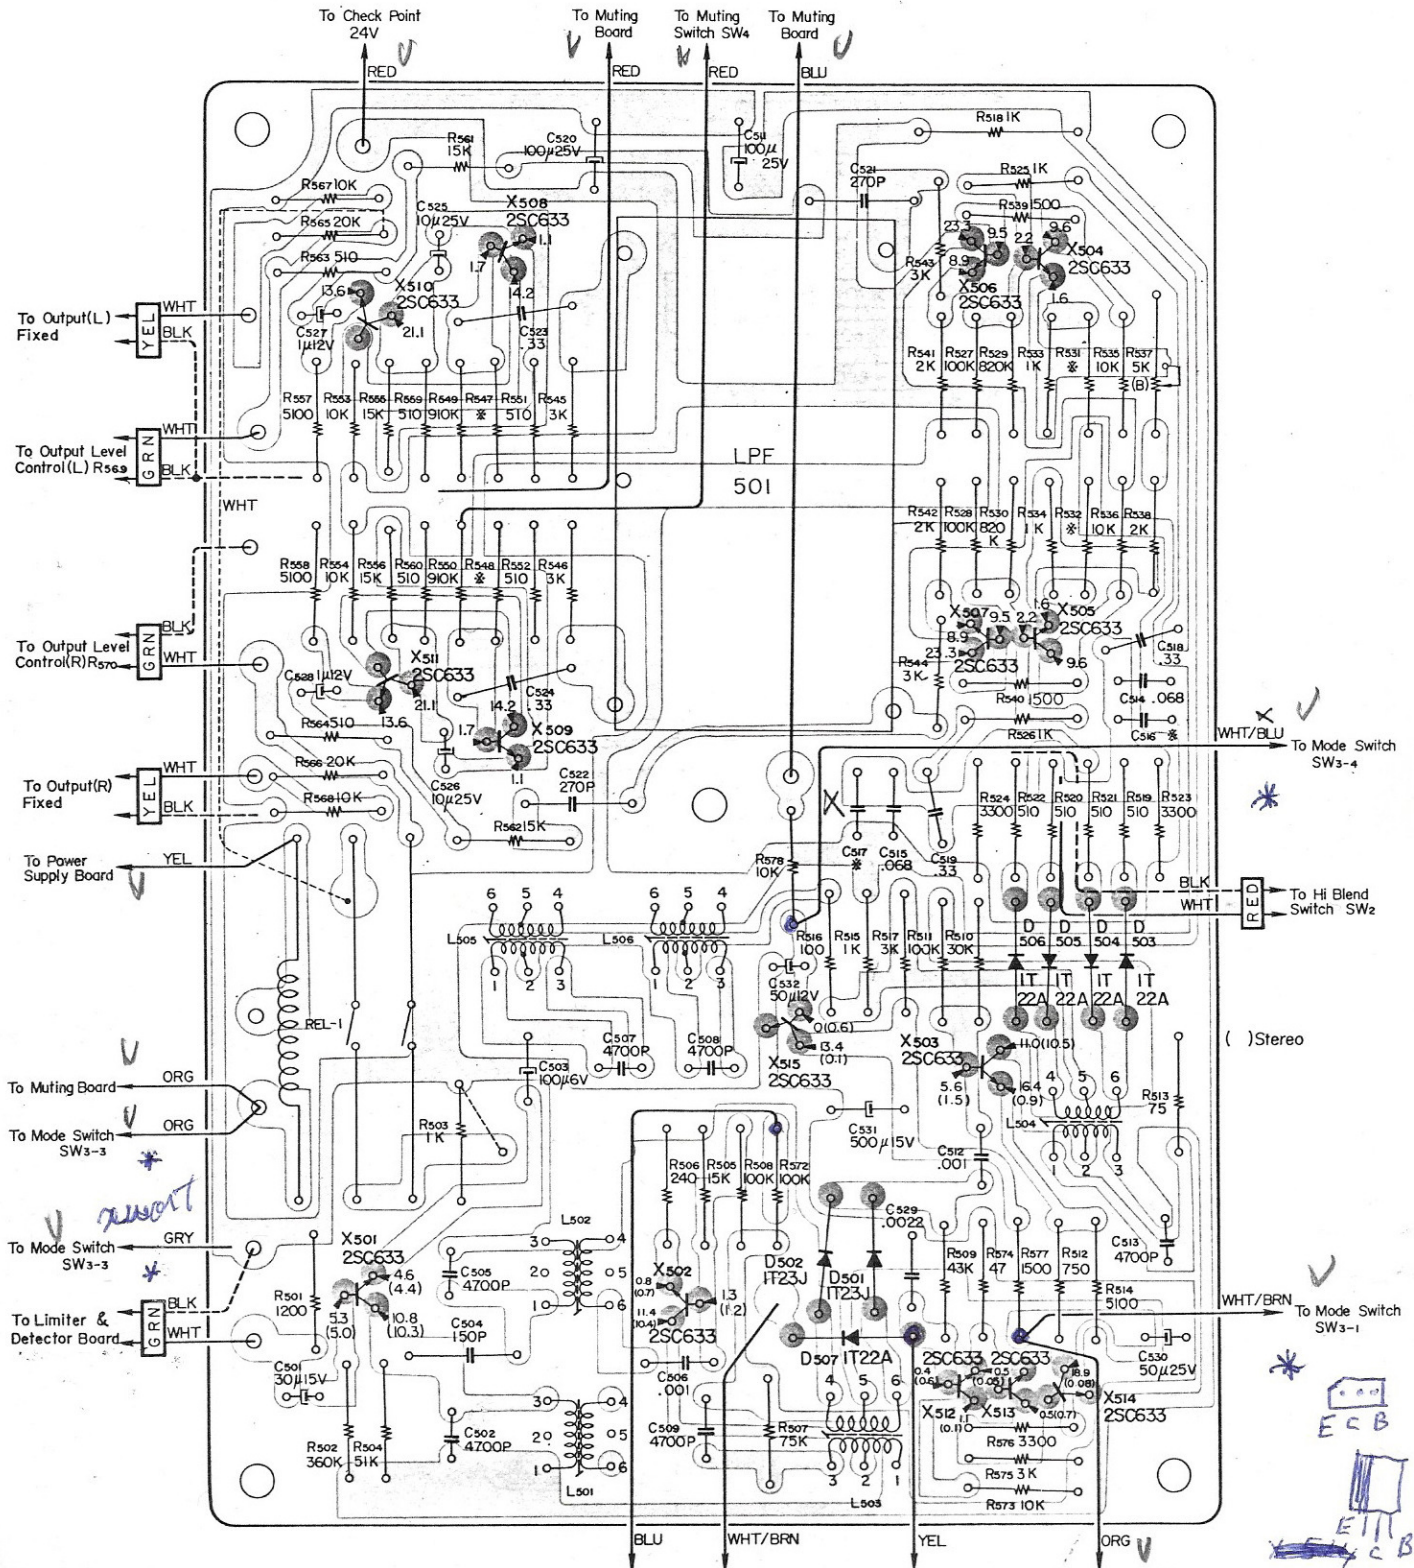

*: To be adjusted.

To Mode Switch SW3-4
To Hi Blend Switch SW2

() Stereo

To Mode Switch SW3-1



X519 2SC6334
Defect

100MA
2500LT

BC547 NPN