


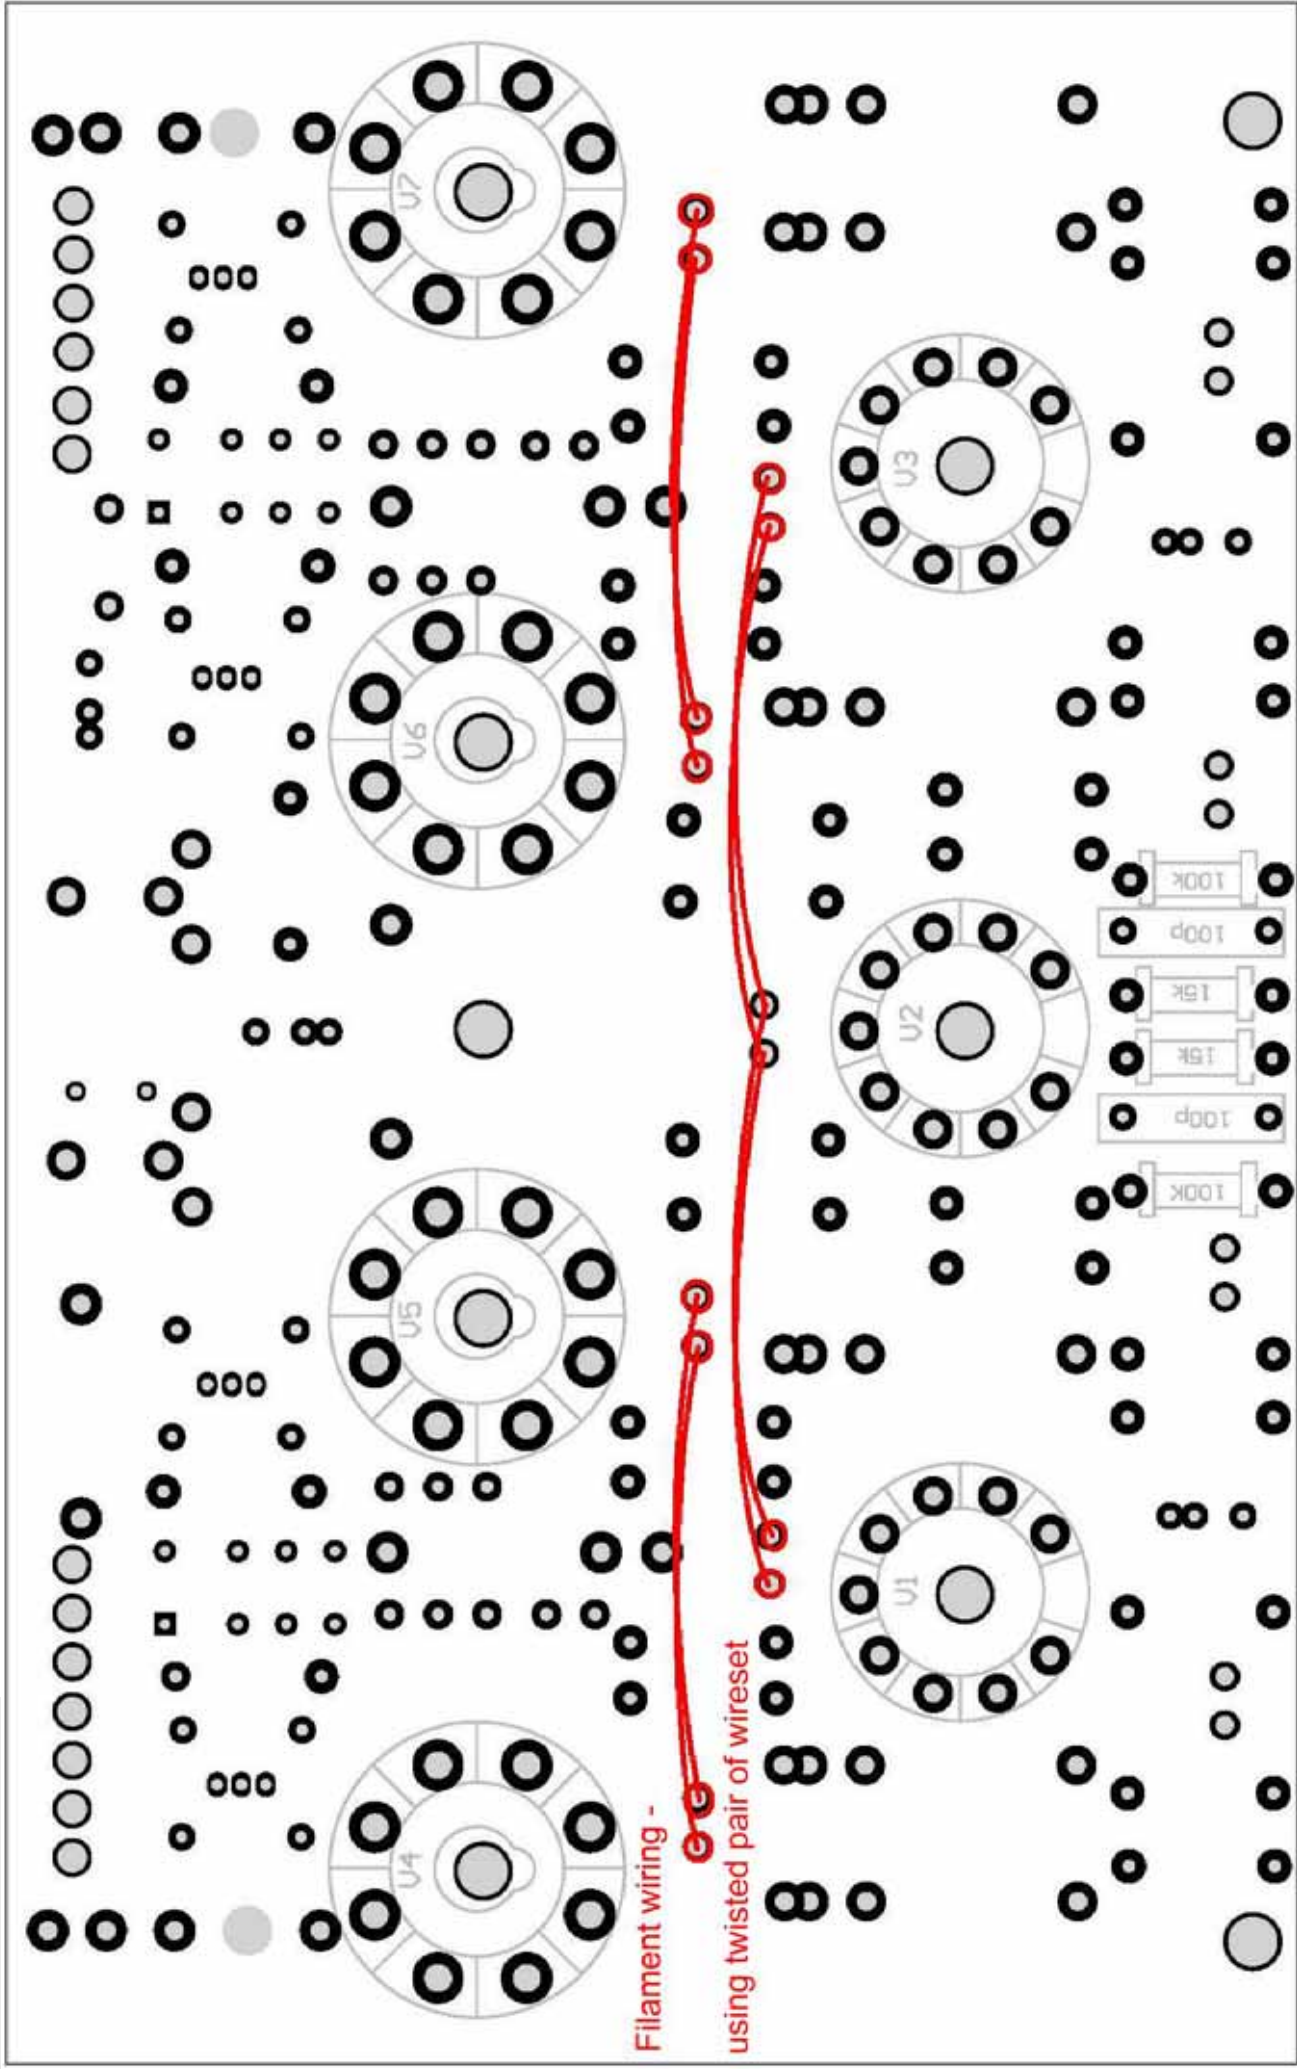

Step 2. Top side parts stuffing





Step 4. Finished PCBA – top side

